

**B. CONTINUED**

6. Close all valves after the tank is emptied and re-cap the deck plate.

**C. EMPTYING THE TANK USING THE MACERATOR PUMP OPTION**

1. Read the macerator pump operating instructions supplied by the pump manufacturer.
2. Close the inlet valve 'A'.
3. Open the thru hull valve 'B'.
4. Turn on the pump with the switch on the 12 volt panel.
5. The pump will change tone after it becomes primed; it will resume the higher pitched tone after the tank is emptied.
6. You may wish to rinse the tank, hose lines, and macerator pump by pumping clear water through the head, then repeating the procedure for emptying the tank.
7. Close valve 'B' immediately after emptying the holding tank.